
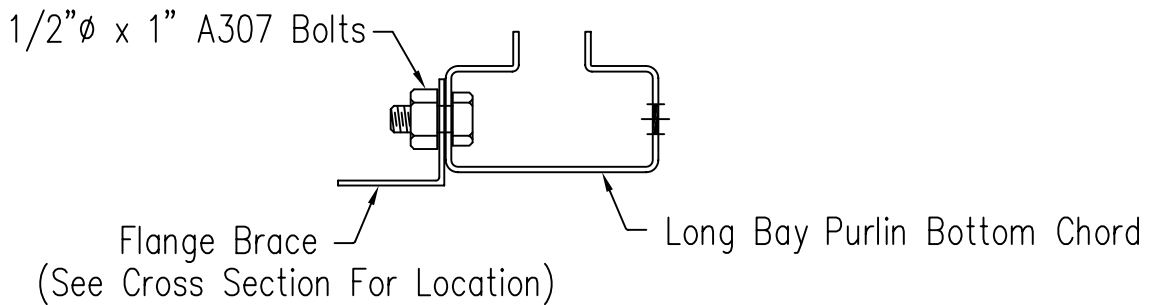


LBS0007

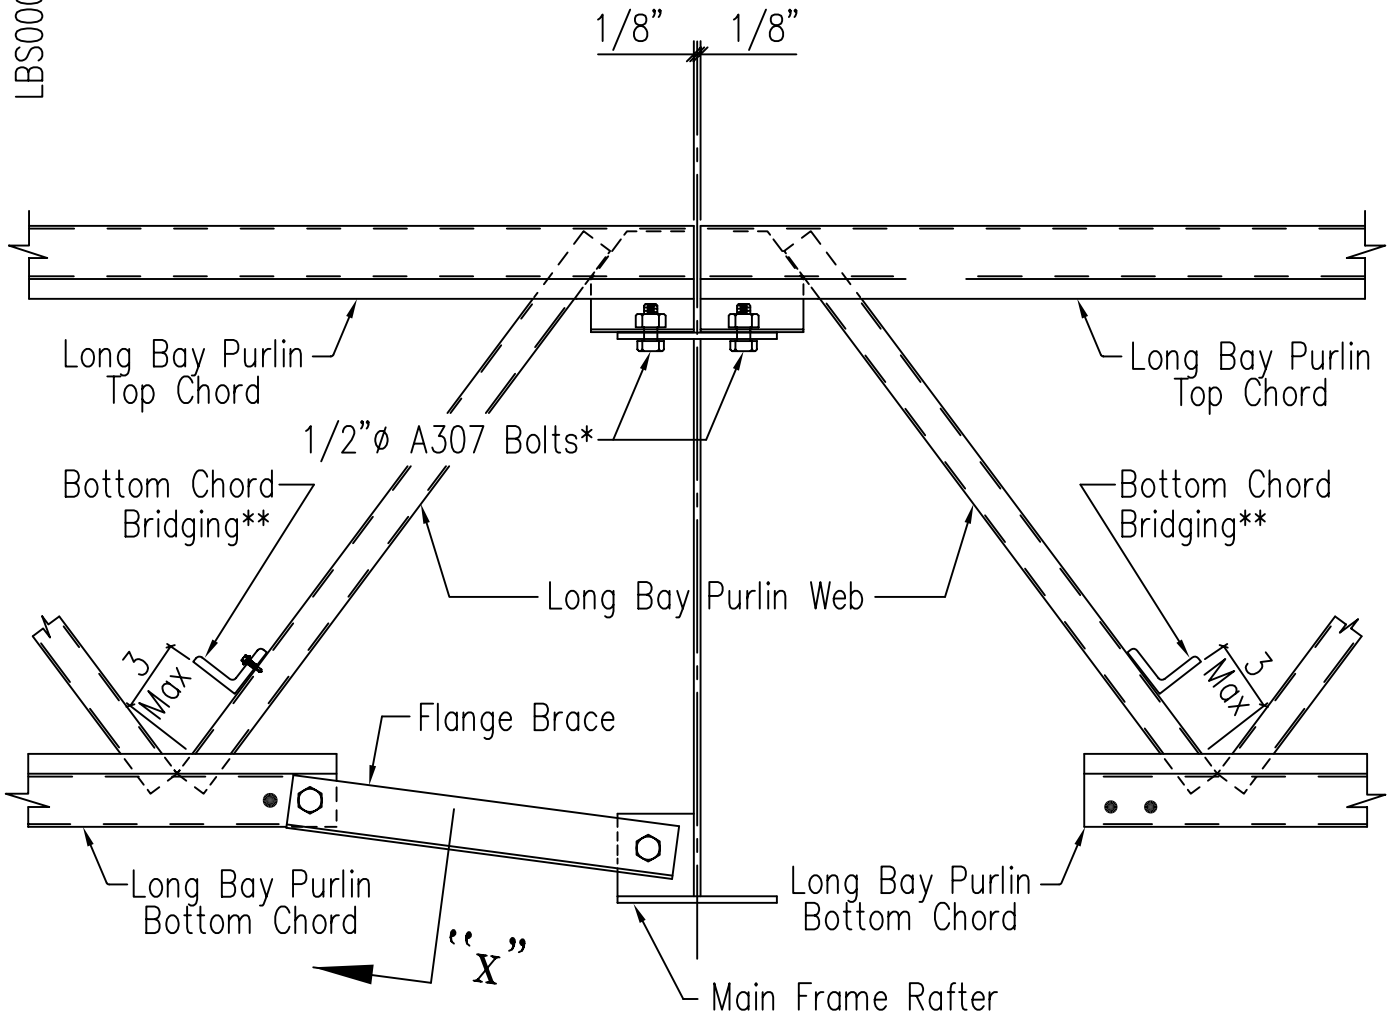


Section "x"

* See Erection drawings or Shippers for length.

** All Bridging is \angle 2 x 2 x 14 Ga. x 20'-0 ~ PM2

Attach Bridging to Purlin Web Tubes With #12x1 1/4 IMPAX 45 Self Driller.

Always Attach Bridging (\angle 2 x 2 x 14 Ga.) x 20'-0 Angle to Solid Side of Web Tube.

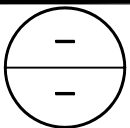

Flange Brace Connection Detail