




LBS2044

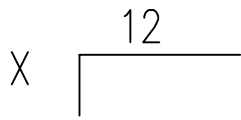

NOTE: Long Bay Spandrel Purlin Must Be Assembled on Ground, 3 Pieces Lifted As One Piece.

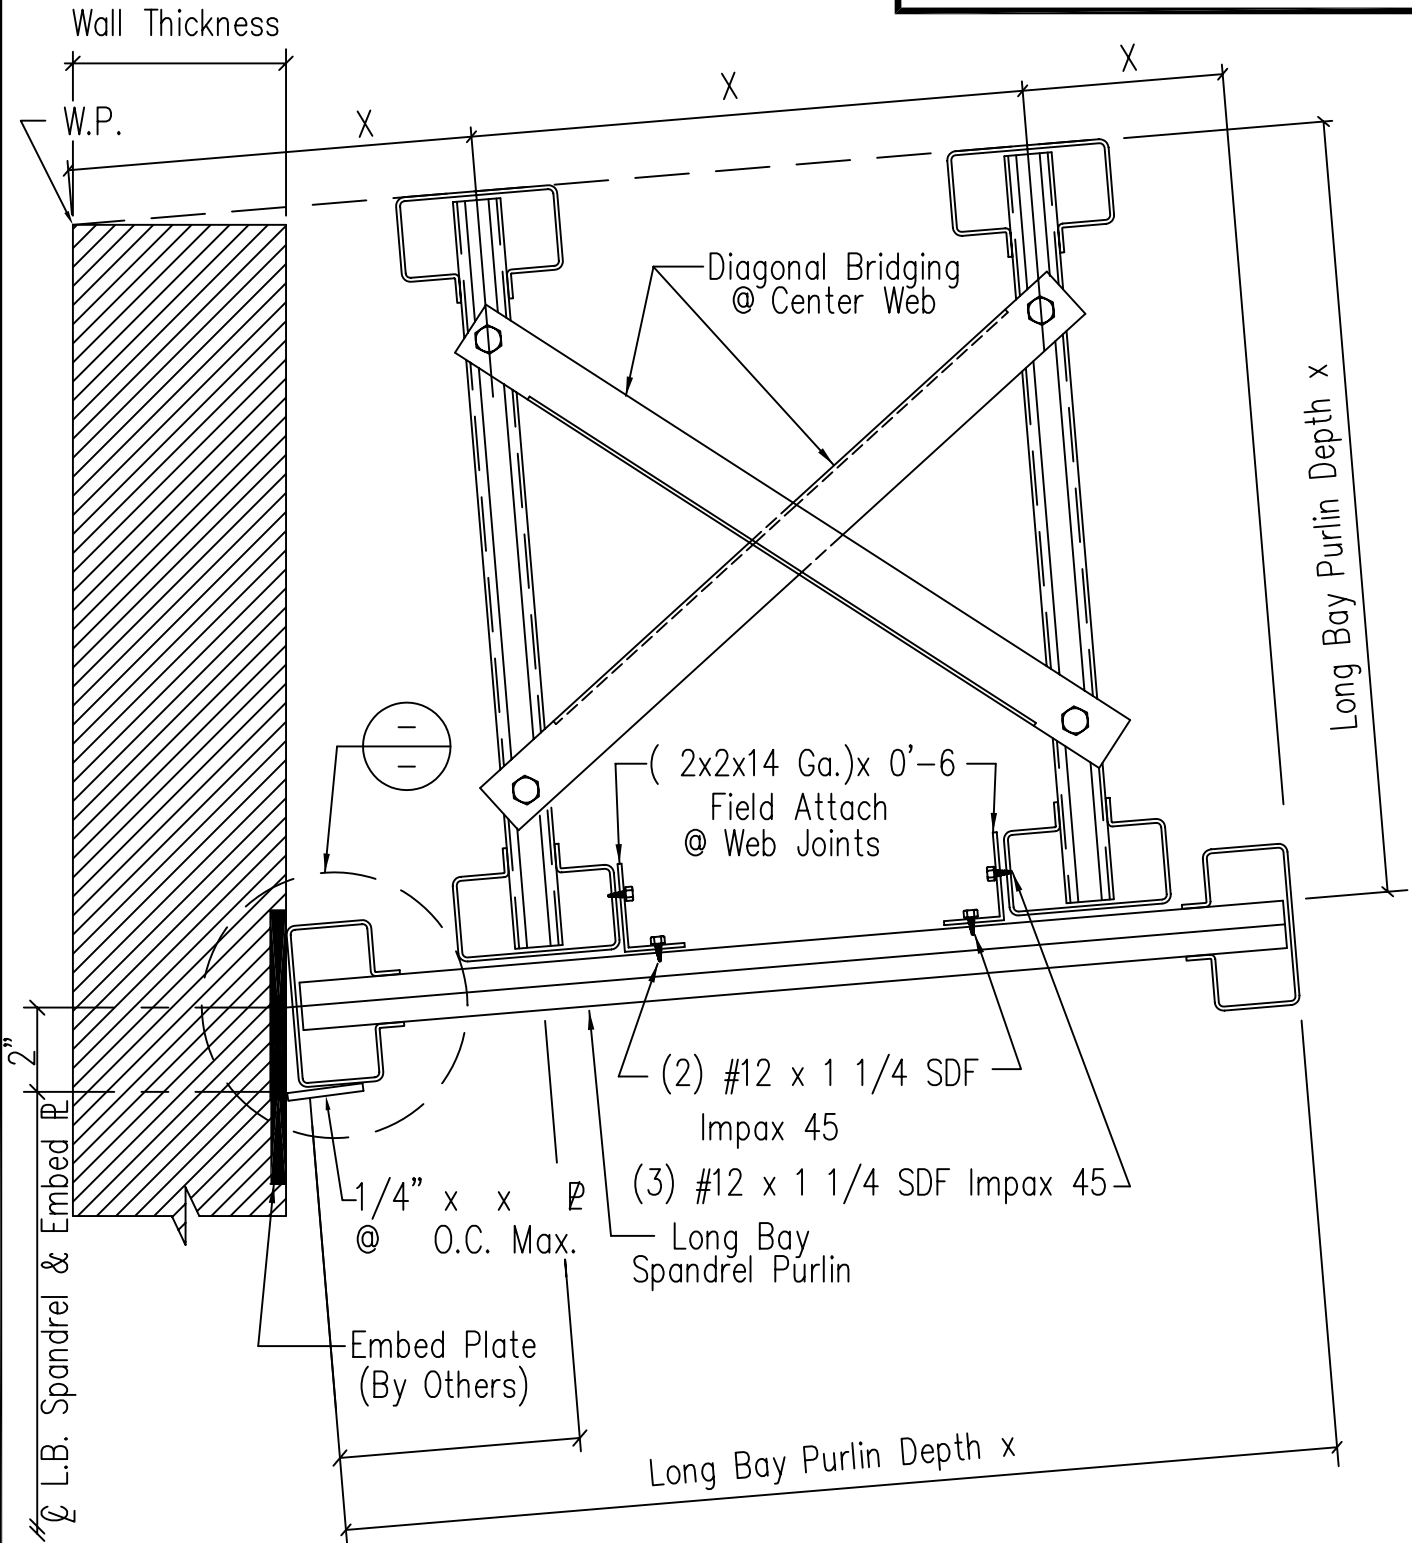

See Long Bay System Spandrel Assembly Erection Guide For Detailed Assembly Instructions.

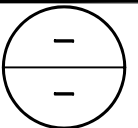

Long Bay Spandrel Purlin At Sidewall Masonry Wall

Issue: 1/25/02 Rev. 1